ConLAB

DCT-3V
Connection diagram

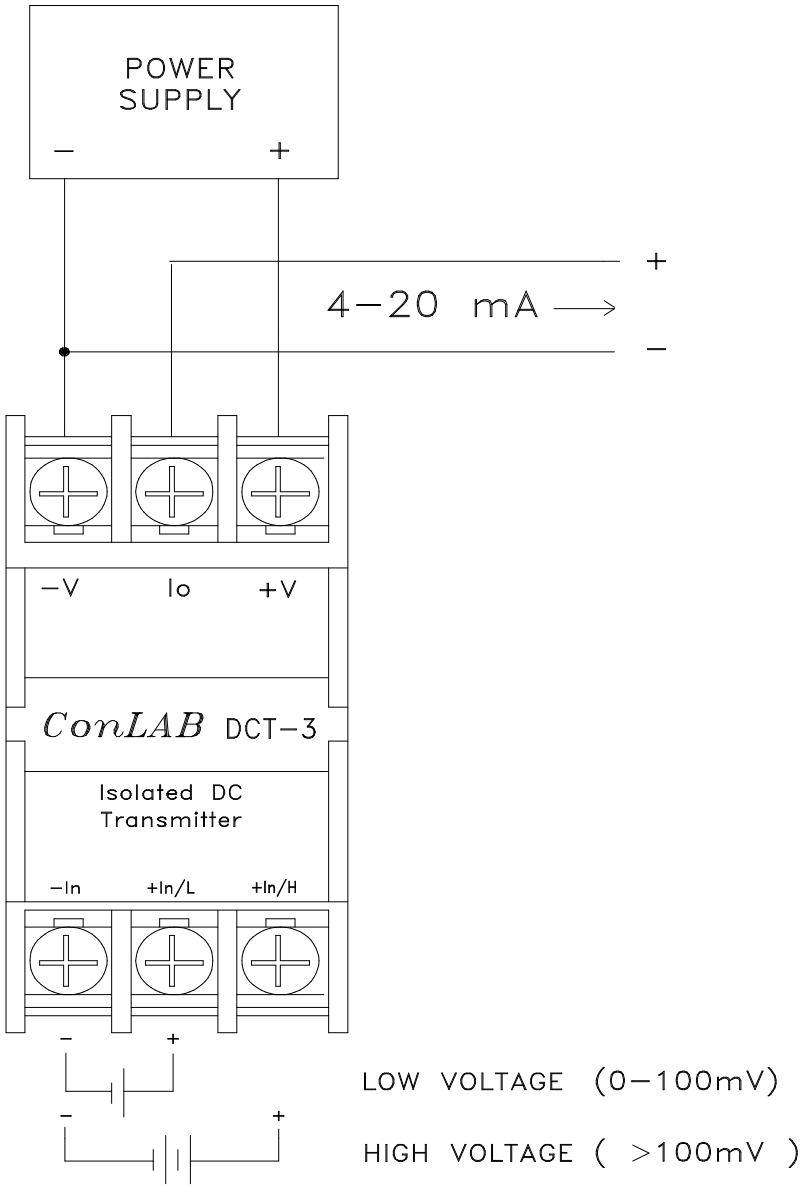

Note:
In case that the required output is voltage, the Io and –V will be used.

CONLAB Control Laboratories Ltd. 20, Hamezuda st. P.O.B 100 Azor 58190 Israel. Tel: +972 3 55 67 688 Fax: +972 3 55 69 540 Email: sales@conlab.co.il